


Care and Maintenance

- Cover must be installed taut. Loose-fitting covers can cause excessive abrasion.
- Initially, adjust the straps so that the springs are set to at least half compression. This will keep the cover tight and aid in draining. The springs should be checked periodically and the straps adjusted to maintain this tension.
- Inspect the springs periodically to make sure the springs are properly compressed (about halfway).
- Be sure your pool has the proper level of sanitizer and algaeicide before closing it for the winter. This will insure that the water is clear upon opening in the spring. If the cover is left on when the temperature has gone beyond 60°F, it may be necessary to add algaeicide to maintain clarity.
- Water level must be within 12" of the cover during the snow season to help support the weight. Failure to do so will void the warranty.
- Read the warranty carefully as to its conditions and make sure the warranty card is completed and mailed to the specified address, or go to www.yourpoolwarranty.com
- When installing or removing the cover, make sure not to drag the cover over any abrasive surface and be careful not to catch the cover material on the springs or anchors.
- For covers not ordered with sewn-on padding, it is required that our loose 2' x 20' padding be placed as a barrier between rough or sharp coping and the cover itself. Failures to do so will void the Performance Safety Cover warranty. Periodic examination of the cover is necessary for detection of early signs of wear.
- The cover may be hosed off and should be allowed to dry before fan folding for storage in its mesh bag. Cover cleaner and treatments, available at most pool supply stores, are also recommended.
- After removing or prior to installing the cover, clean out all the anchor sockets with a stream of compressed air or water. This biannual cleaning will assure proper anchor function. Applying spray silicone to these components will also be beneficial to their proper operation. When the cover is not in use, screw anchors down completely to keep out debris and prevent tripping and foot injuries.
- Large accumulations of snow should be carefully removed, taking precautions not to damage the cover. Likewise, if a large puddle of water accumulates, it should be removed immediately by directing it to the drain or by using a weighted cover pump. The straps should be readjusted to prevent a reoccurrence. Failure to perform this maintenance could result in stretching or damage to other cover components. Drainage can be facilitated by slightly loosening the strap that runs through the drain areas while tightening the straps away from the drain. A small amount of puddling is normal and will evaporate in dry weather. If you have questions about these or any procedures, please contact your cover installer.
- Standing water resulting from melting snow and rain must be removed immediately. Covered pools located in heavily wooded areas are susceptible to accumulation of leaves, needles and other debris that will inhibit water flow to and through the "Invis-A-Drain". It is very important to keep the drain clear of debris at all times. Water can be removed by placing a weighted pool cover pump in a suitable location on the cover. Cover pumps are available through local pool dealers.
- **SAFETY IS EVERYONE'S RESPONSIBILITY!** Our safety covers are built to meet or exceed every related safety and structural regulation governing their manufacture. However, it is the consumer purchaser's responsibility to follow all safety instructions provided with any safety cover and to educate all users of the product as to its safe and proper use.
AT NO TIME SHOULD ANYONE PURPOSELY ATTEMPT TO ENTER THE SAFETY COVER.

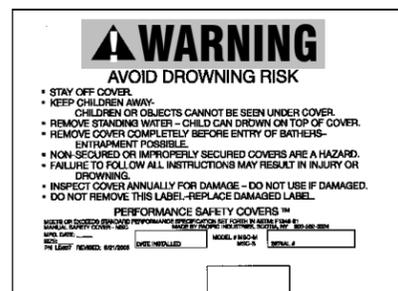

LATHAM PLASTICS
787 Watervliet Shaker Road
Latham NY 12110

SAFETY COVER INSTALLATION MANUAL

Rectilinear Pools. (Rectangle, Grecian, True/Lazy L, Modified Oval, Roman, etc.)

Installing a safety cover is best accomplished by two or more people.

Be certain that the water level is not more than 12" below the deck. A greater distance will void the warranty. See a pool equipment supplier for skimmer covers and other devices that will allow the water to be left at a higher level.


1. Remove any obstructions that were not accounted for in the cover's design and manufacture. Non-removable objects may be accommodated by using a Y-strap assembly, Coated Stainless Cable assembly or Reduced Deck Mounting (RDM) system. (See your supplier for details.) If the cover has one or more cutouts for obstacles such as diving platforms, slide legs, waterfalls, raised ladder sockets or rock formations, the cover must first be attached at those points.
2. Find the center of the pool at each end. Using a chalk line, mark the center line out 3-4 feet from each end of the pool onto the deck.
3. Place the cover on the deck at the shallow end of the pool and spread it, right side up, over the pool as shown on the box lid. Place one spring about halfway onto each center strap. Pull the springs and straps tight to determine how far back from the pool's edge the anchors should be placed. The distance is usually about 30" from the edge of the pool, though it may vary with the amount of overlap and the fastening system being used. Once the correct measurement is determined, mark a point on the deck at that distance from the pool's edge near the intersection with each perpendicular wall. Strike a chalk line on the deck between those points to establish a line parallel to that edge of the pool. Use the same technique along the other walls of the pool, making sure that the cover overlaps the deck equally. Take particular care on pools with steps. Some step shapes will cause the overlap at the step to be greater than the overlap at the wall on which the step(s) may be placed. Be sure that the cover is pulled tight and the springs are adjustable in both directions. If an anchor is too close to the pool, proper tensioning will not be possible and the cover will sag and may not drain properly.

Once the center strap anchor positions of the end walls have been determined, transfer the distance between the remaining strap locations to each chalk line on the deck. Do so by working from the center strap and alternating from side to side. Use the same process on the sides of the pool, always beginning at the center of each wall.

Do not locate or drill corner strap anchors until the ends and sides are installed.

Tips: Place weights (use water bags, sandbags or 5 gallon pails filled with water) at the corners of the cover and as necessary around the perimeter to hold the cover in place. **If the deck texture is rough, it is necessary to place padding between the cover and the deck to protect the cover from abrasion when shifting the cover. Rough decks may require permanent placement of a special pad under the cover to protect it.**

Keeping the straps tight will also minimize abrasion by restricting movement of the cover. On decks less than 36" wide or in corner or step area it may be necessary to place anchors beyond the deck area by using law tubes or stakes. The RDM system is also an option when decks are less than 36" wide. See Photo Below

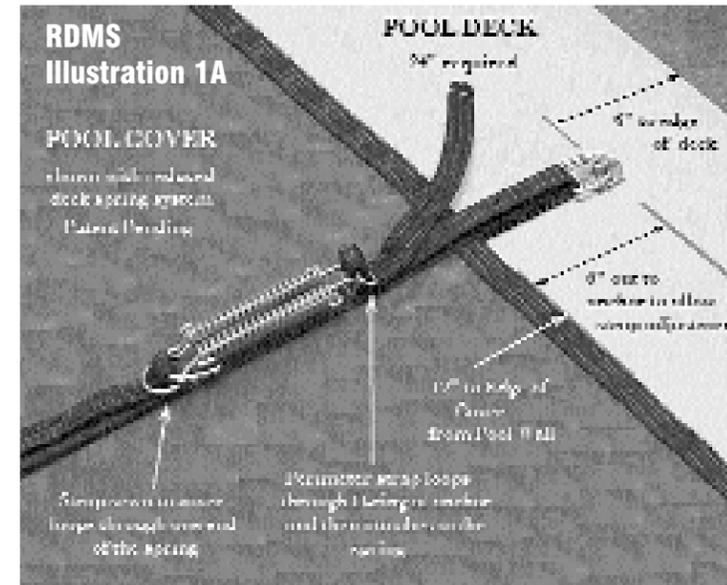

4. As the straps cross the chalk line, pull them in a straight line or angled just slightly toward the nearest corner. Doing so helps keep the perimeter of the cover flat against the deck. The point at which the strap crosses the chalk line is where the anchor hole should be marked and located.
5. Remember that any cutout position(s) must be identified first and their strap locations referenced to a chalk line. Set the depth of the anchor hole by wrapping tape at a distance from the tip of the masonry bit that corresponds to the length of the anchor body. The depth can also be checked by inserting the anchor installation pin (also known as a 'tamp tool') up side down into the hole; the shoulder of the tool must be just below the deck level. Use a hammer drill with a long, 3/4" diameter masonry bit to drill all the holes. Drill holes at all the end and side anchor positions. Do not drill the corner anchor holes at this time.

6. Vacuum all dust and debris from the holes and surrounding areas, allowing the anchors to be set flush with the deck. If drilling has caused the perimeter of the hole to chip, brass anchor collars (escutcheons) are available to cover the damage. Use the installation pin to set the external body of an anchor into each center strap hole. (See Figure E). Then thread a lubricated insert into each anchor body leaving the unthreaded portion above the level of the deck. Silicone spray is recommended for lubrication and should also be applied following annual anchor cleaning with pressurized water.



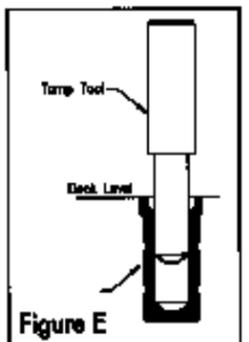


Figure E

7. See the proper strap weaving method in the illustrations below. **Illustration "A"** shows the correct installation of a cover strap when using the D-ring. Please note that while the D-ring spring is standard on all covers, buckles may be ordered and used with the D-ring assembly. **Illustration "B"** shows the way in which the D-ring can be bypassed and the buckle used as an alternative means of securing a strap.

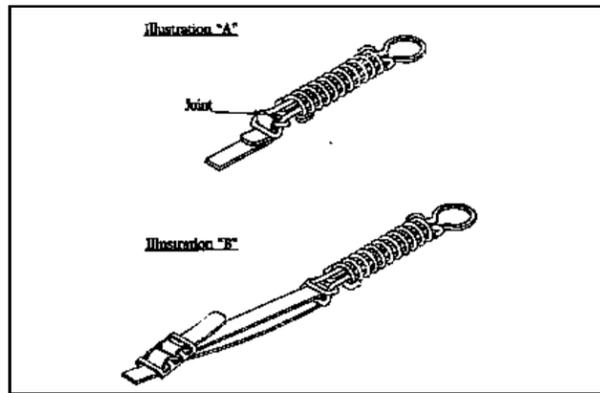

8. Attach a spring to each end and side strap. A cover will fit much better if both ends of the cover are centered and anchored before moving to the sides. Using the installation rod, start at the center of each end, alternating in sequence from the center straps and attach each spring as shown in the illustration below. Attach the side springs next. Attach each step cover spring last. *Detaching the springs when the cover is removed is accomplished by reversing the installation process. Do not kick or in any way abuse the springs upon removal. Failure to use the rod voids the warranty.*
9. Adjust all straps for proper tension. Each spring should be compressed about 50% or slightly less. The main objectives are to ensure equal overlap and promote direction of water toward the cover's drainage system. The cover's edges must be flat on the deck upon completion of the installation.

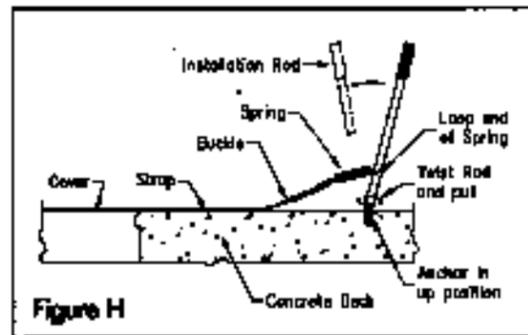

10. The cover's corner anchor positions can now be located and drilled. It may be necessary to place them at a slight angle. That will allow the properly tensioned corner straps to draw the cover into a wrinkle-free position that promotes drainage. *Check spring tension and alignment throughout the cover season. Although springs have been properly positioned and tensioned upon installation, it is equally important to adjust them while snow, rain and debris have their cumulative effect. Uniform spring tensioning will prevent puddles from forming leading to damage to the cover. Be sure that the cover's edge is the same all around the pool. Homeowners must be shown the care and safety instructions on the cover labels!*



- **Reduced Deck Mount System (RDMS):** See front page for illustration 1A. This method will be used in two different applications.
- 1) Where the width of the deck is between 2' to 3' as shown in (RDMS Illustration 1A).
 - 2) Where the perimeter of the cover needs to be held tighter, or closer to the deck, such as in step areas of multi level decking. (See Multi Level Decking Illustration 1B)

Freeform Pools (Kidney, Mtn. Lake/Pond, Lagoon, etc.)
Freeform safety covers can be installed following the same guidelines as those for rectilinear covers; however, their configurations make the use of chalk lines unlikely for locating anchor positions.

1. Freeform covers are designed to provide about 1 1/2 times the overlap of rectilinear covers. As a result, their anchors are placed approximately 18" back from the cover's edge. Find the center strap of the cover and position it such that the cover overlaps the pool's perimeter equally. If non-removable obstacles exist, the cover should be positioned and attached first at those points. Use weights to hold the cover in place as suggested in the "Tips" section of this manual. Effective weighting of Freeform covers is essential to their proper installation.
2. Attach springs to each end of the center length (end) strap and as shown in illustrations A and B. Mark the anchor locations approximately 18" back from the edge of the cover with the straps pulled tight. Drill the holes, vacuum and set the anchors as described previously. Attach the springs to the anchors and tension them properly. Be sure the overlap is equal on each end. Alternating from the center strap, repeat this procedure for all length (end) straps.
3. Find the center width (side) strap and attach springs to each end. Mark the anchor locations approximately 18" back from the edge of the cover while tension is applied across the strap. Drill the holes, vacuum and set the anchors as described. Attach the springs and tension them properly. Repeat with each width strap alternating from the center out.
4. Once all anchors and springs are in place, adjust the tension equally on all springs making sure the cover lies perfectly flat.

Check spring compression and cover drainage periodically throughout the season. Homeowners must be shown the care and safety instructions on the cover labels.

Installing anchors in surfaces other than concrete.

Pavers, brick and stone

It is not uncommon for pavers, brick or stone to be dry set on a bed of sand. In order to secure a safety cover to materials such as these, it is necessary to use a lawn tube with an anchor inserted into it. Lawn tubes are about 18" long with an outside diameter of 1". They have an inside diameter of 3/4" to accommodate an anchor body.

To install a lawn tube:

- Because some masonry materials will crack when drilled, drilling a test piece prior to installing an anchor is suggested. If the material does not tolerate this process, locate the hole at the intersection of two or more pieces. Mark the intended anchor position and drill a 1" diameter hole into the material. If the masonry materials are set on a concrete slab, drill completely through the slab. A core drill works well on fragile or brittle materials.
- Lawn tubes are supplied with an anchor and insert as an assembled unit. Use block of wood and mallet to tap the tube into the hole until it is flush with the deck's surface.
- Remove the insert, lubricate it and screw it into the anchor body until only the unthreaded portion is exposed. Attach springs as instructed.


It is important to note that this system may also be used in stable soil on which fixed decking is not installed.

Wood Decks

Anchor bodies for wood decks have flanges that are 1 1/2" in diameter by 1/8" thick. Each flange has countersunk holes to accommodate wood screws.

To install wood deck anchors:

- Countersink a 1 1/2" diameter hole into the deck 1/8" deep.
- Drill a 3/4" diameter hole into the center of the first hole and to the same depth as or slightly more than the length of the anchor body.
- Vacuum dust and chips from the hole and surrounding area, insert the anchor body and tap it flush with the deck surface.
- Install the screws and thread a lubricated insert into the anchor body until only the unthreaded portion is exposed.

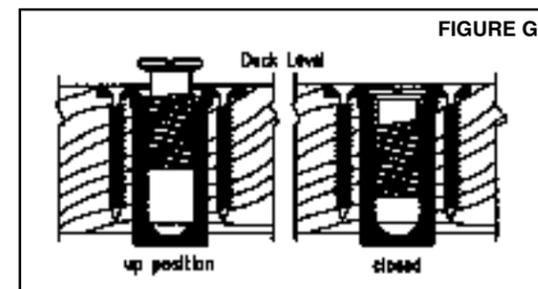

NON-REMOVABLE OBJECTS AND OBSTACLES

Diving boards, spas, raised walls, planters, rock formations and waterfalls are among the many pool features that require special arrangements in order to be covered safely.

If you have a raised wall, obstacle, or raised area on your pool, then this is your starting point for installing your cover. Center and align this section of your cover around the obstacle, checking both ends of obstacle, and applicable area of cover, for proper alignment and fit. At this point, transfer strap, and/or spring clip locations to the obstacle. Start at the center and work outwards. (Anchor locations to be drilled at 3/4" above "deck level" so you can screw the Eye bolt into the shielded anchor). Using chalk, mark these reference points. Drill 5/8" diameter holes at these reference points, and install the anchors and eye bolts. Tighten down the eye bolt to expand the anchor in the obstacle, keeping the eye of the bolt horizontal (parallel) to the deck surface.

Optional Hardware Available



The Coated Stainless Cable assembly includes 2 brass anchors, 2 cable clamps, 1 turnbuckle and 15 feet of coated stainless cable. This system can be used in conjunction with eyebolt and spring clips to provide a more positive attachment, or to compensate for drilling misalignment, or irregularities of

the object. If the cable is used, it can be attached to the deck on both sides of the obstacle by the use of the brass deck anchors. Weave the cable through the existing eyebolts and secure to the deck anchors. By use of the cable clamps and turnbuckle, you can now set the proper tension on the cable.



If you have elected to use the cable assembly, you should attempt to attach the spring clip to the eyebolt directly, in areas of misalignment, the spring clip can be attached to the cable directly.



The Y-strap assembly is most often used to go around a diving board stand/base, although it can be used for other applications. This assembly includes 2 straps sewn to a ring, 1 anchor, 1 buckle and 1 spring with protective cover.

The Y-strap D-ring gets attached to the center cover strap using the buckle. The Y-strap angles out and around the diving board base. Use 2 springs and anchors to attach both ends of Y-strap to the pool deck.

Do not install a solid safety cover not equipped with a drain system unless an electric, submersible pump is provided with the cover.